


# HRV, Air to Air Exchanger

## 1.1 AIR DISTRIBUTION (NORMAL OPERATION)

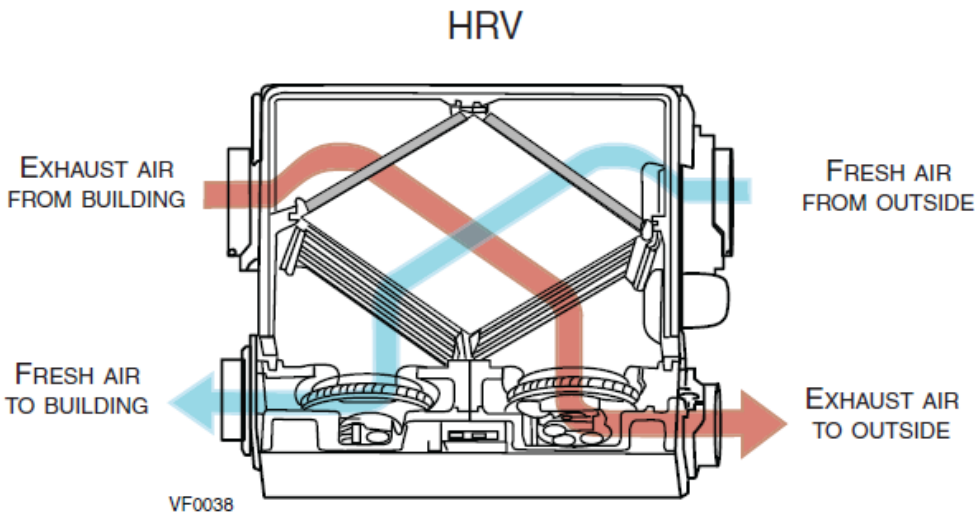

A house has to have a certain amount of fresh air for the occupants and appliances. An HRV brings fresh air in and takes stale air out without losing any of the heating or cooling